


VW Beetle Cluster Removal Instructions

Removing

If replacing a malfunctioning instrument cluster with a new one, note [odometer](#) reading on existing cluster prior to removal.


NOTE: Speeding wheel removal is not necessary. For clarity, steering wheel is shown removed in the following illustrations.

- Release steering wheel tilt/telescope lock, lower steering wheel and pull out completely. Lock into position.

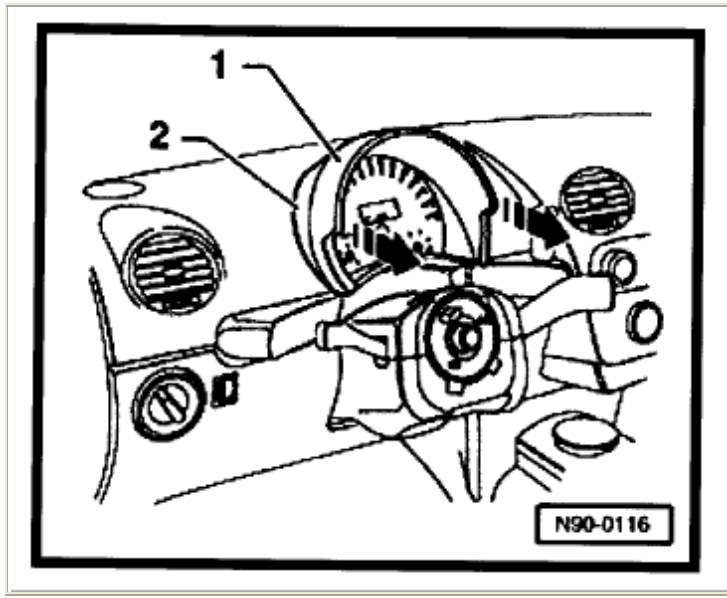

- Release trim ring -1- from instrument cluster mounting -2- clips.

VW Beetle Cluster Removal Instructions

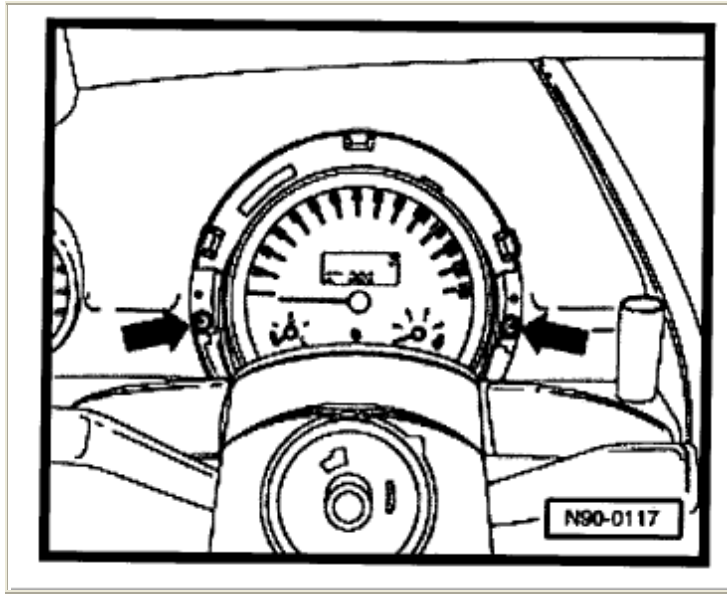

- Remove two screws (arrows).
- Tilt instrument cluster slightly toward passenger compartment.
- Disconnect harness connectors at rear of instrument cluster.
- Remove instrument cluster.

Installing

- Install in reverse order of removal.
- After completing installation, check function of instrument cluster.

If the instrument cluster has been replaced because it was malfunctioning, and a functional check does not display a malfunction:

- Code instrument cluster.
- Adapt [odometer](#) display.
- Where applicable, code Data Bus On Board Diagnostic Interface -J533- according to vehicle market version and equipment level variables
- Where applicable, adapt instrument cluster for anti-theft immobilizer functions.